

Wirecast Gear 3

Example Setups



Wirecast Gear Example Setups


There are many ways to set up Wirecast Gear. Here are just a few.

For more info, call us at +1 877 681 2088

Wirecast Gear is capable of running everything from very basic to very advanced productions. Here are some of the many ways Wirecast Gear can be setup.*


*NOTE: There are four different models of Wirecast Gear 3. Talk to a salesperson at +1 877 681 2088 if you have more questions about which model is right for you, or visit www.telestream.net/wirecastgear for more info.

“Use What You’ve Got” | Basic HDMI

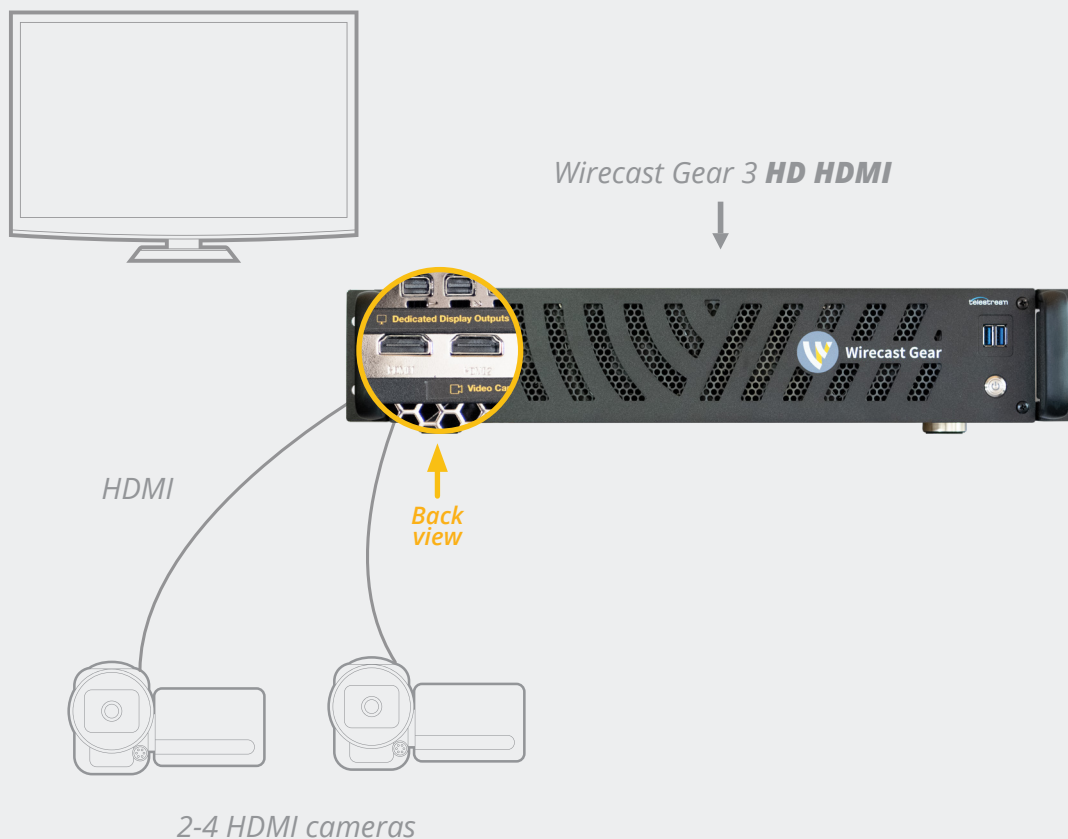


“One Man Band” | PTZ Optics Cameras


OPTION 1 (via Ethernet)

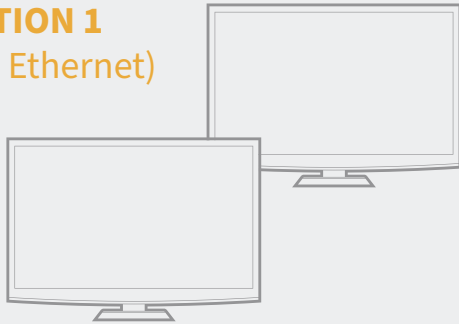

Wirecast Gear 3 **HD HDMI** or **HD SDI** for HD cameras,
or Wirecast Gear 3 **4K HDMI** or **4K SDI** for 4K cameras

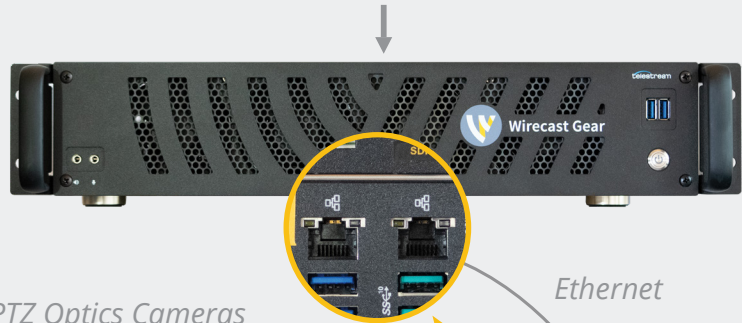

PTZ Optics Cameras
(PTZ controller within Wirecast Software)

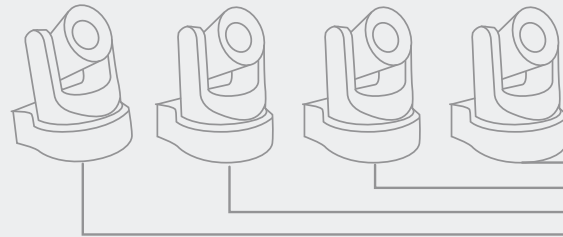

Back view

Ethernet




Ethernet
Switch


OPTION 2 (via SDI)



Wirecast Gear 3 **HD SDI** for HD cameras or
Wirecast Gear 3 **4K SDI** for 4K cameras

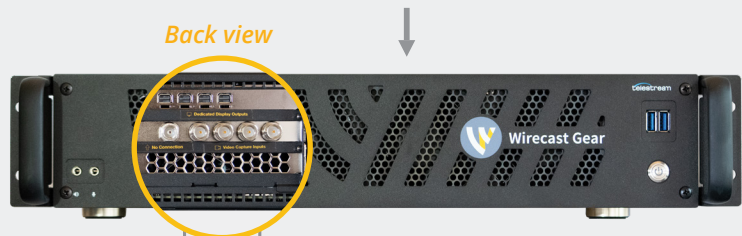


Back view

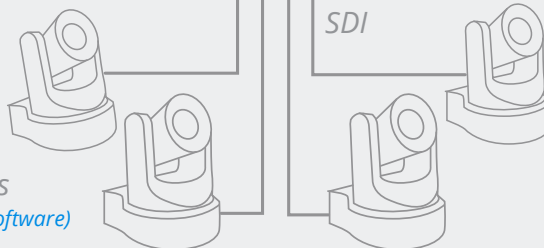

PTZ Optics Cameras
(PTZ controller within Wirecast Software)

SDI

“The Hybrid” | HD-SDI + HDMI + Network

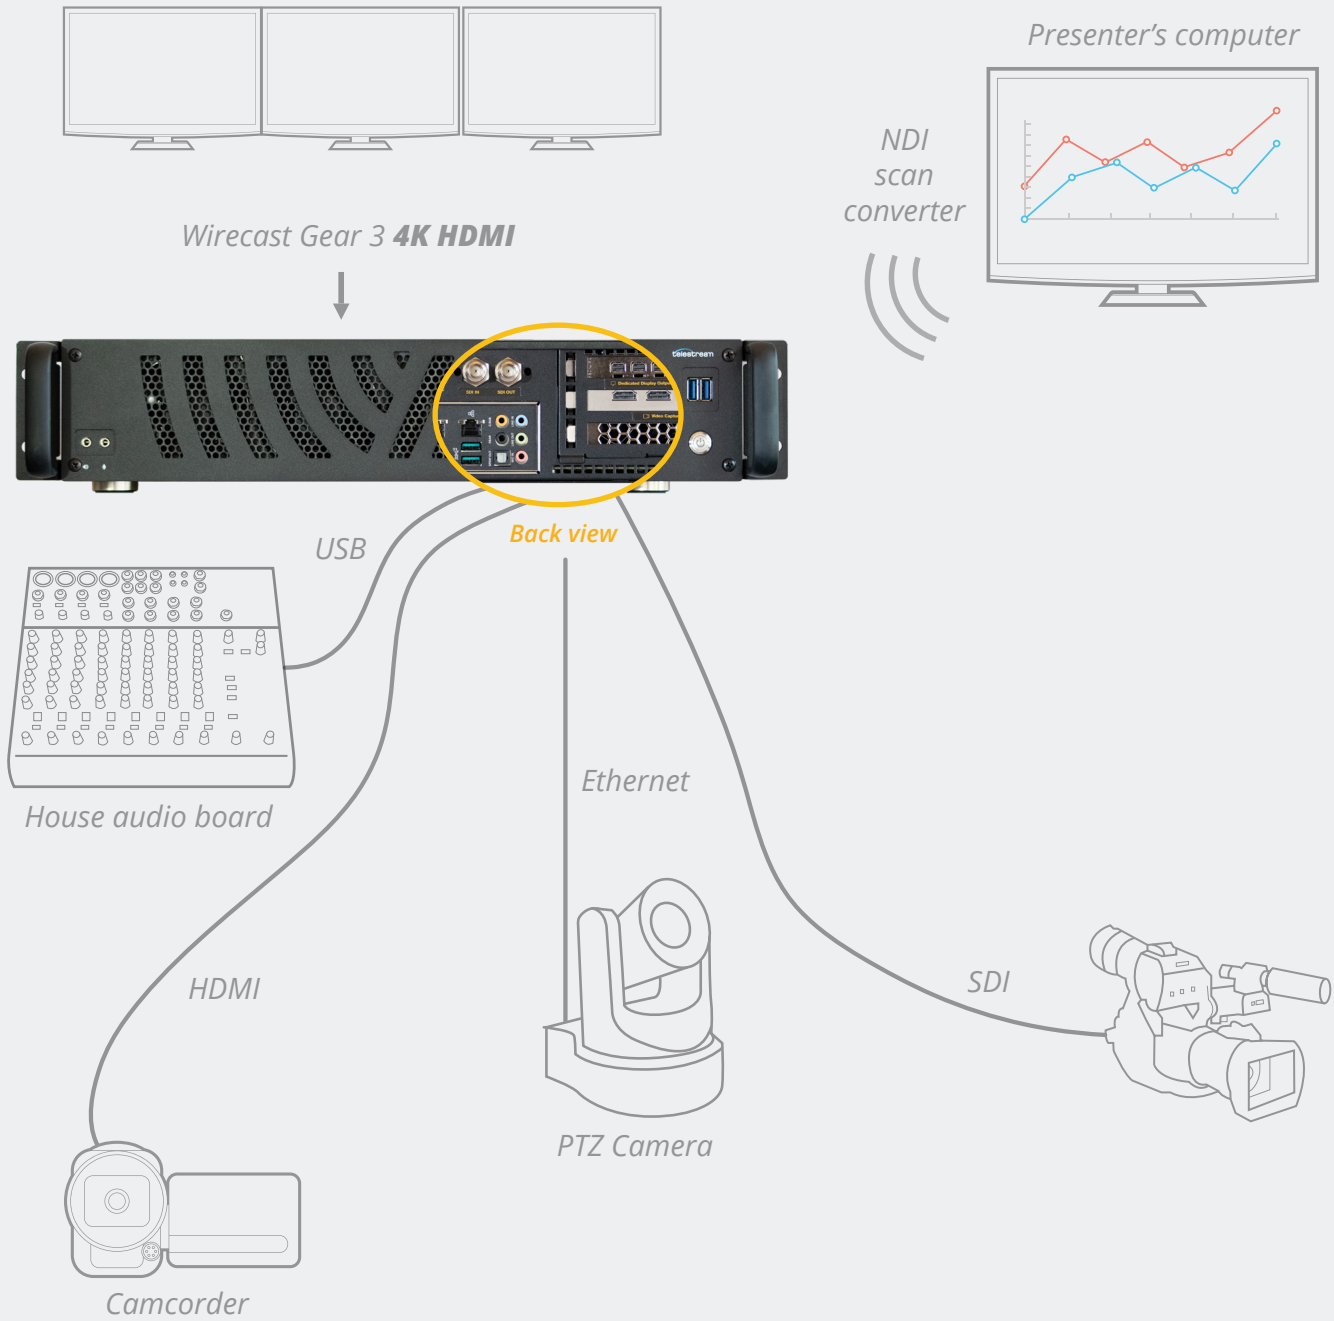

“The Pro” | SDI + NDI + Audio Mixer

